

To switch on and off mdrrc with a button.  
connect a momentary push button between x5-4 and ground  
no pc connection necessary.

Use a momentary push button to switch the mdrrc manual on/off

